



**219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 14 - RIGHT - TOE**

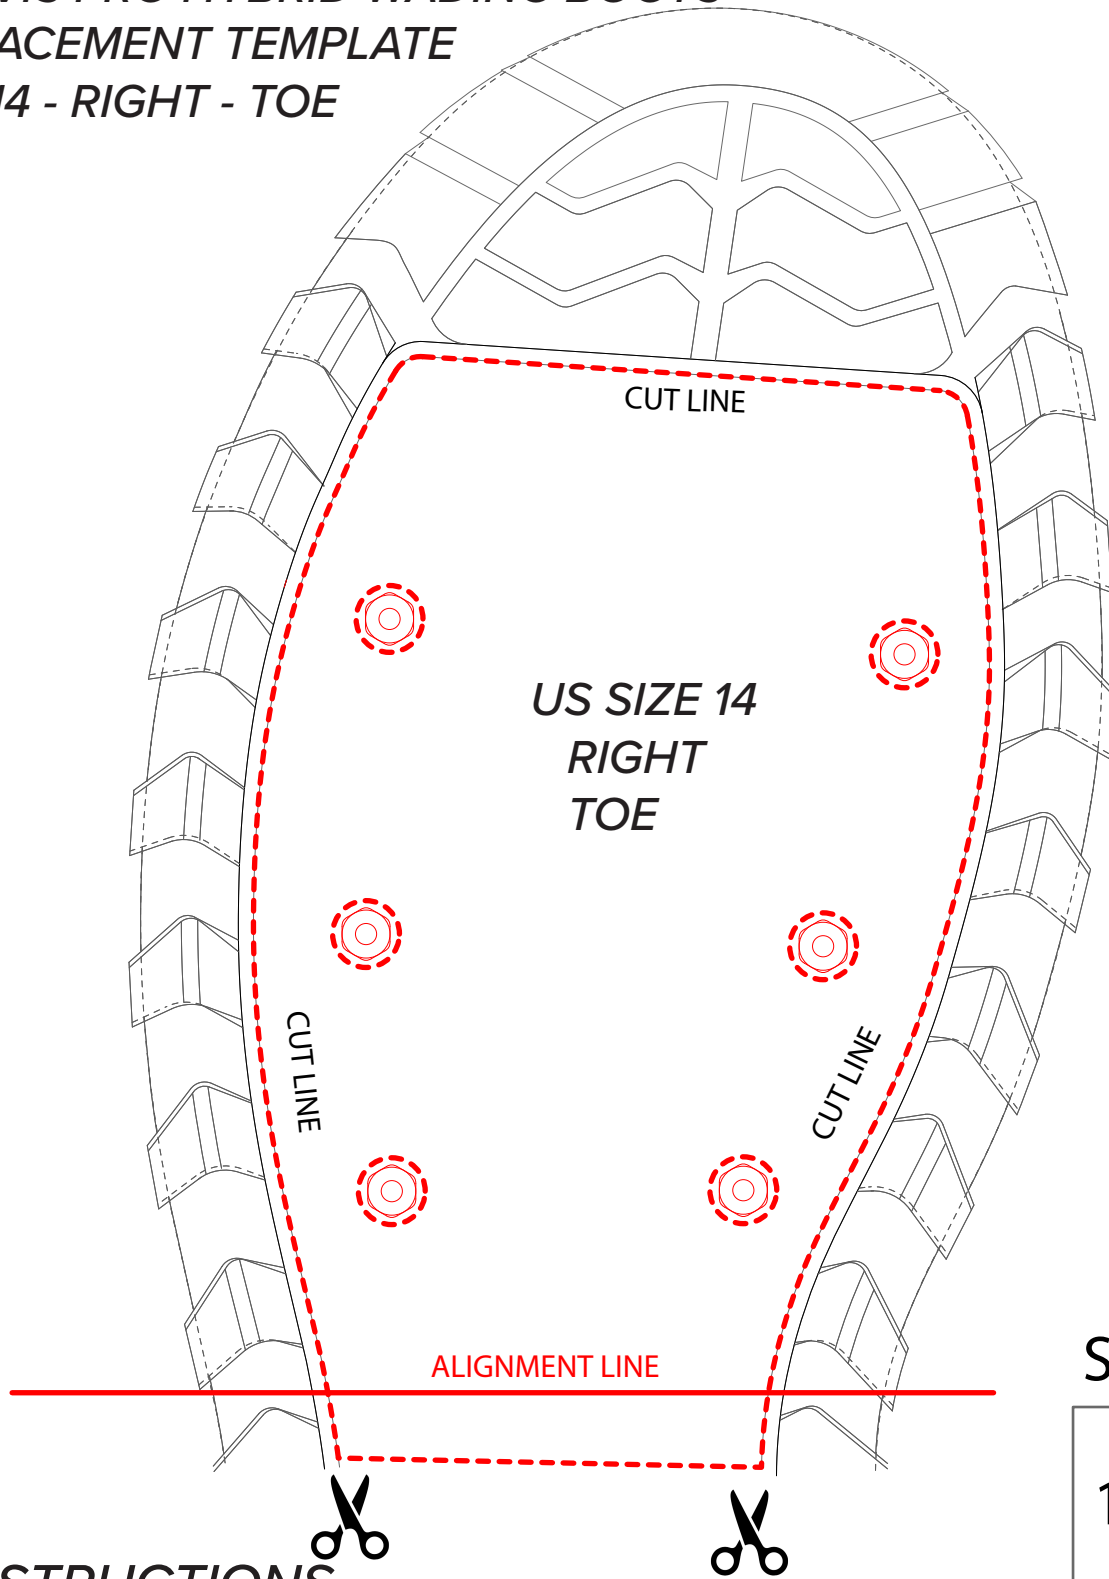


SCALE

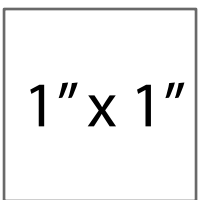


INSTRUCTIONS

1. PRINT TEMPLATE TO SCALE
2. CHECK SCALE BOX MEASUREMENT TO ENSURE ACCURACY
3. CUT OUT THE TEMPLATE ALONG THE DASHED LINES
4. USE ALIGNMENT LINE TO STRAIGHTEN
5. TAPE TOE AND HEEL TEMPLATES TOGETHER
6. MARK STUD LOCATIONS WITH PERMANENT MARKER
7. SCREW IN STUDS TO MARKED LOCATIONS

219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 14 - RIGHT - HEEL

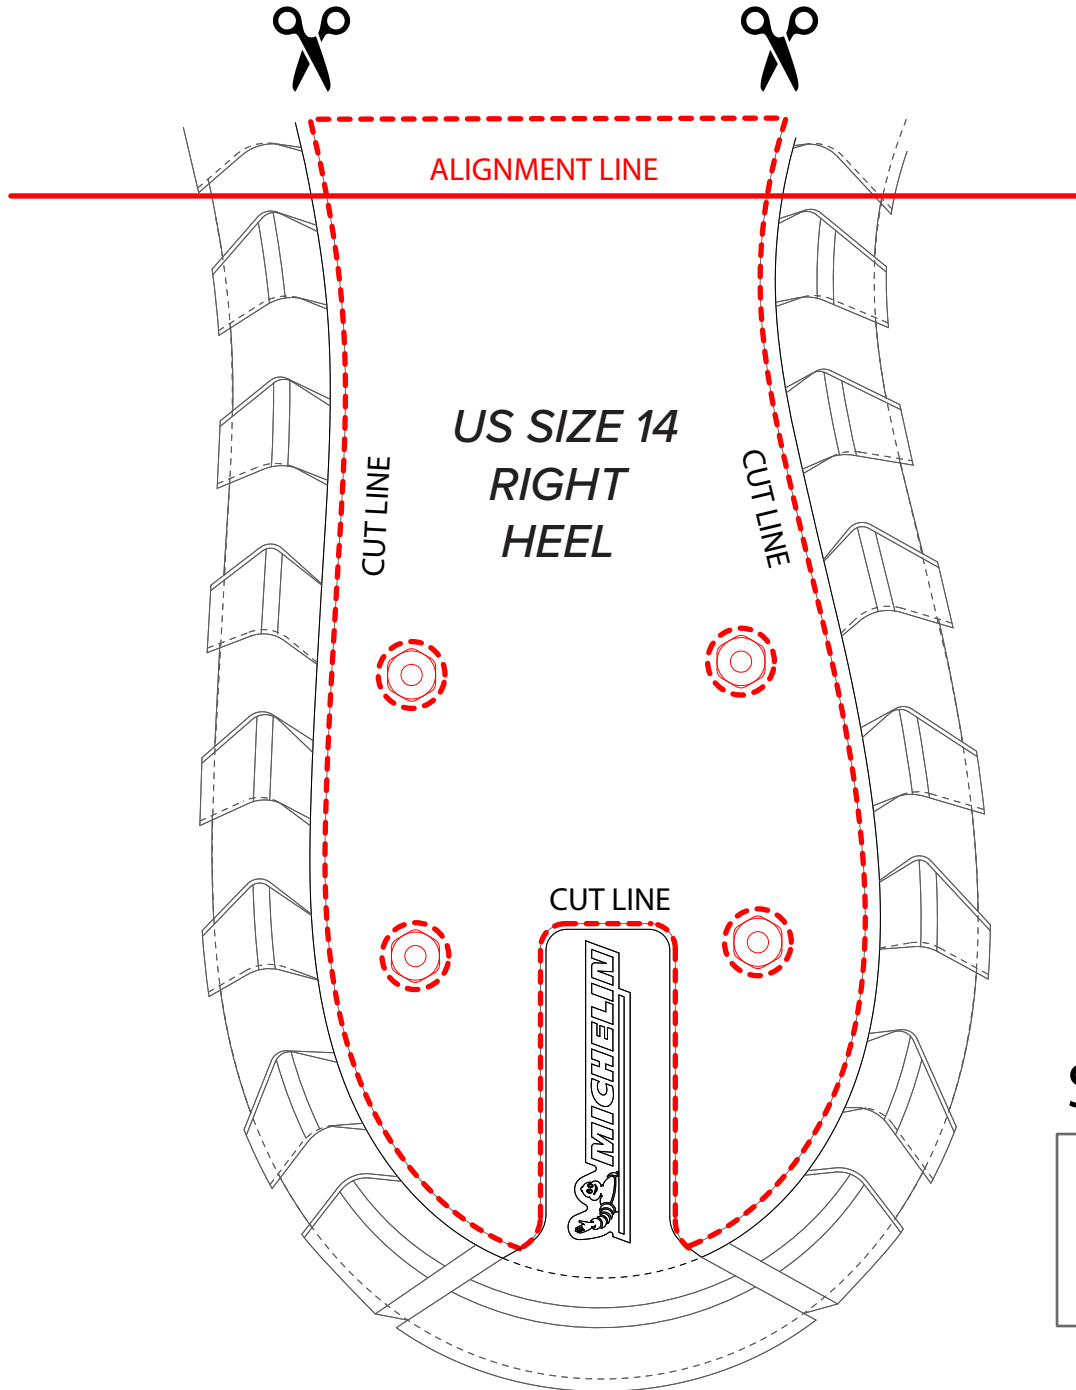

219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 14 - LEFT - TOE

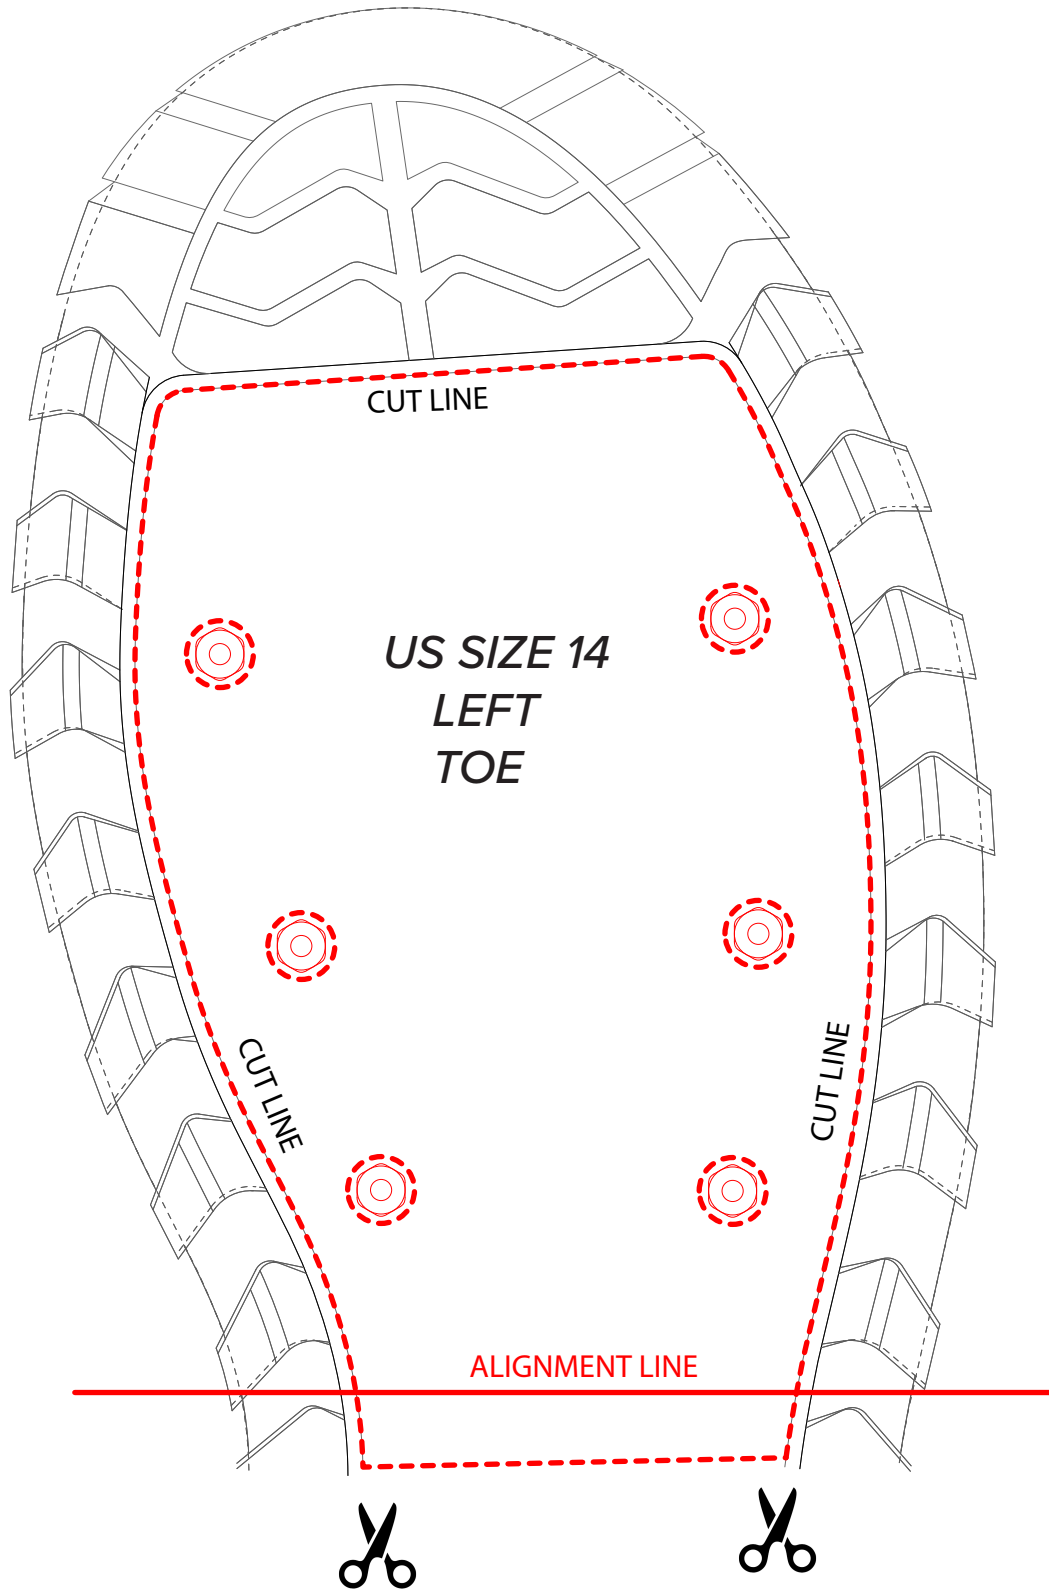

SCALE

1" x 1"

219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 14 - LEFT - HEEL

