



**219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 7 - RIGHT - TOE**

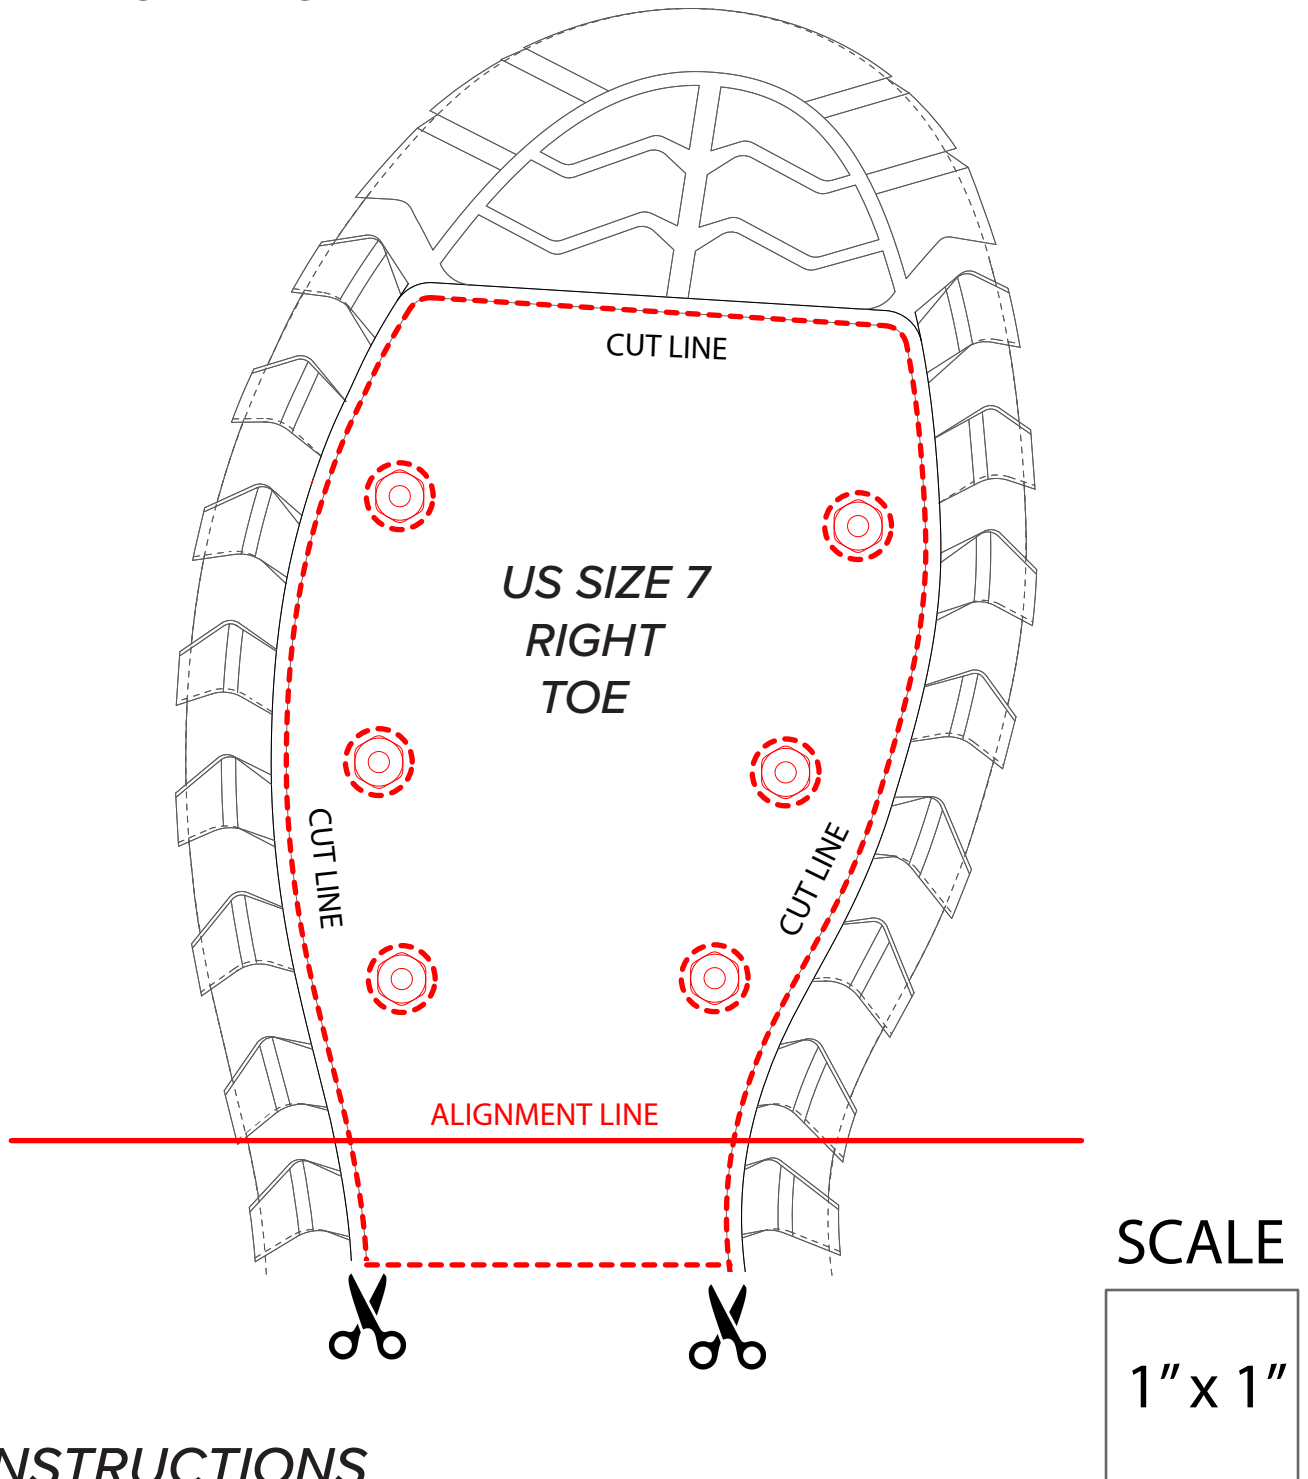

INSTRUCTIONS

1. PRINT TEMPLATE TO SCALE
2. CHECK SCALE BOX MEASUREMENT TO ENSURE ACCURACY
3. CUT OUT THE TEMPLATE ALONG THE DASHED LINES
4. USE ALIGNMENT LINE TO STRAIGHTEN
5. TAPE TOE AND HEEL TEMPLATES TOGETHER
6. MARK STUD LOCATIONS WITH PERMANENT MARKER
7. SCREW IN STUDS TO MARKED LOCATIONS


219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 7 - RIGHT - HEEL

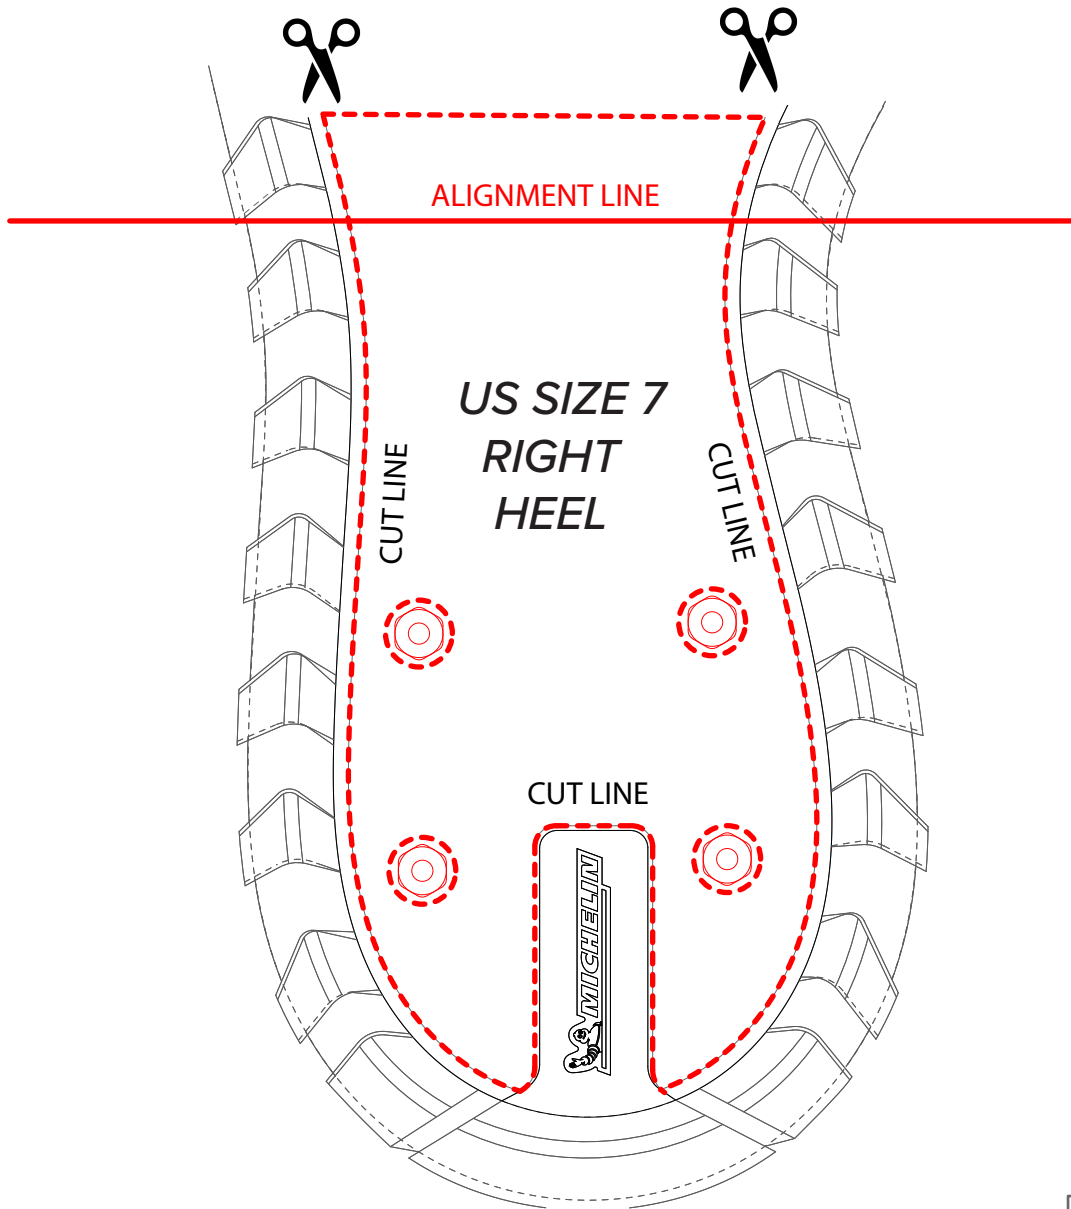


SCALE

1" x 1"

219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 7 - LEFT - TOE

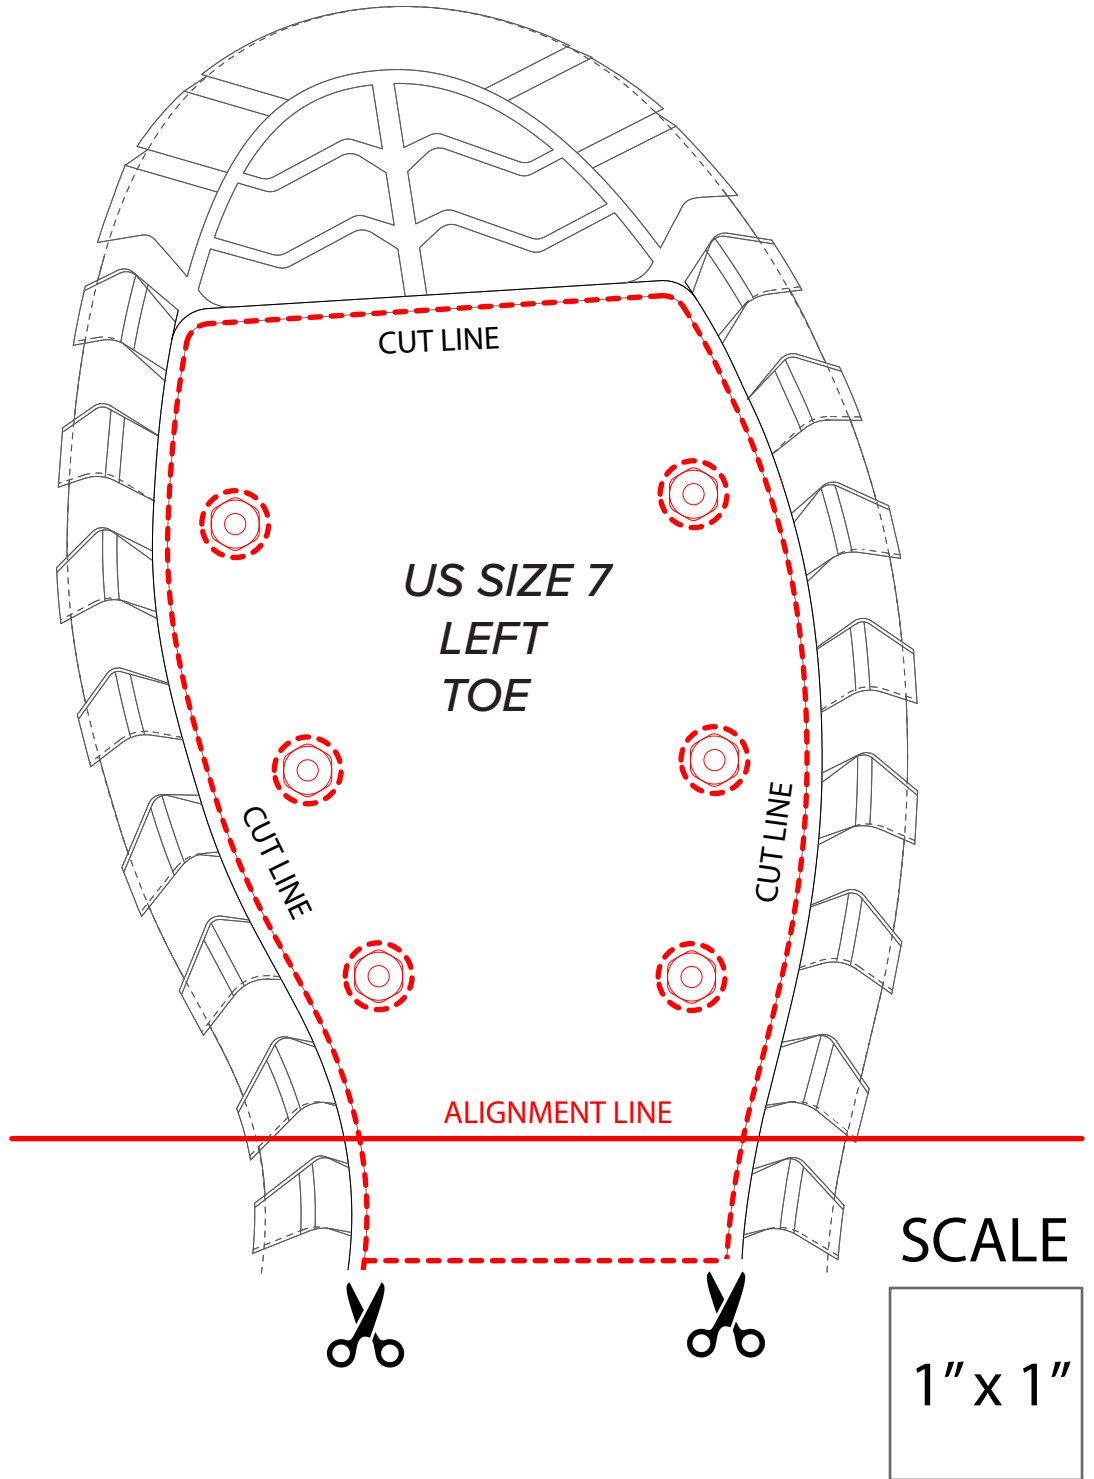

219N ORVIS PRO HYBRID WADING BOOTS
STUD PLACEMENT TEMPLATE
US SIZE 7 - LEFT - HEEL

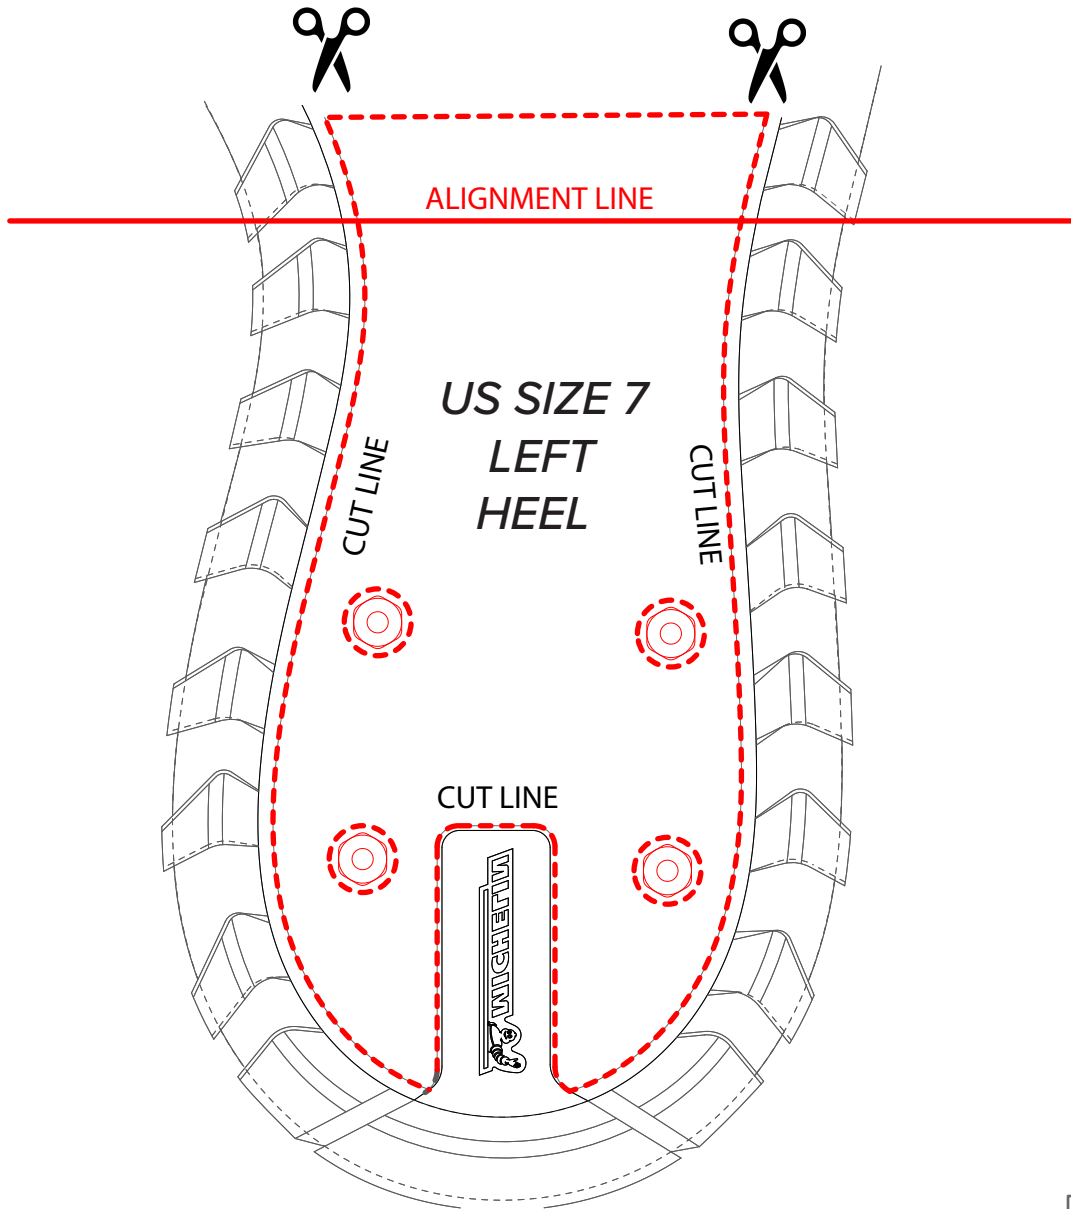

SCALE

1" x 1"